



ACC.1 Waterproof Single DIN Stereo Housing Cover Kit

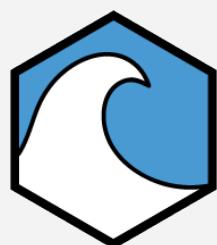

MARINE

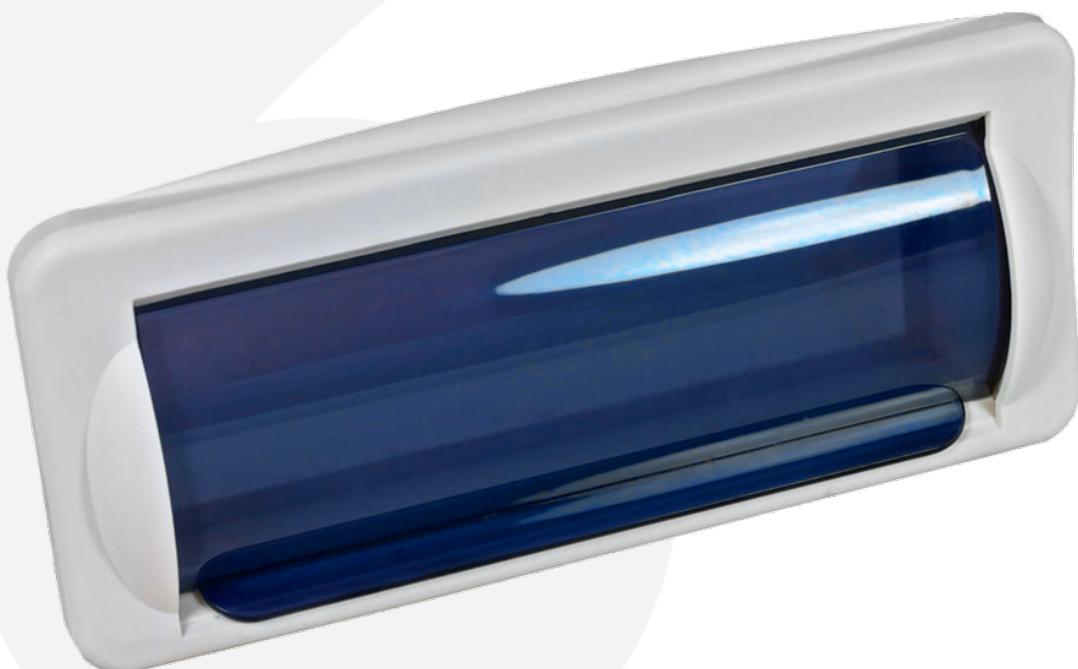

Instruction manual

Thank you for choosing Bassface. From the simplest connector to our top of the range amplifier - every element of these products has been designed to give you the best possible performance for your money. Please take the time to read these instructions carefully as they contain useful and important information. Modern high power audio systems can generate voltages at the speaker similar to mains operated equipment - for some reason everyone seems to ignore or forget this. Your wiring needs to be good to be safe. Please remember this and take your time. Please exercise caution when setting volume levels - powerful audio equipment can easily produce enough sound to permanently damage hearing. Remember that audio competitors use ear protection when operating and competing. Do remember that incorrect installation or abuse is not covered under warranty - please make sure that your installation and any partnered product is suitable and compatible. If you are unsure please seek qualified advice before proceeding. Always use appropriate hand and eye protection when working with tools, and always work within your capabilities as an installer. We offer a 12 month manufacturer warranty via your distributor or retailer. Please retain your purchase receipt as proof of purchase. Please note that Bassface operates a policy of continuous product development and we reserve the right to change specification without prior notice. You can follow our process on our website by reviewing the version history information.

Please note that we sometimes include information inside these manuals which we feel is of potential value to the client on related subjects such as conversion charts, capacitance values or wiring diagrams. Please feel free to copy any of this information since it is in the public domain.



To install the ACC.1 into the vehicle or vessel please follow these steps:

1. Use the provided rubber mount gasket to draw a template where you wish to cut, check behind the panel you are cutting for obstructions behind and use a non permanent marker to make the outline.
2. Drill a pilot hole in one of the corners of sufficient width to insert your jigsaw bit - observe tool safety such as protective glasses and gloves.
3. Slowly and carefully cut the line until an opening is present the same size as the gasket piece, sand any sharp edges and clean the surface around the hole so it is free from dust/dirt.
4. Carefully unclip the outer trim of the cover, insert the splash cover body it into the hole to check fitment and mark the four screw holes.
5. Drill a pilot hole for each of the four screws, place the gasket on the rear of the cover (Ensuring to remove the sticky back plastic), secure the cover into the hole using screws suitable for the material you have cut into.
6. Refit the outer trim. Pressing it into place firmly all the way round. Now you are ready to fit your head unit.

ITALIAN:

1. Usare il guarnizione in gomma per disegnare un modello in cui si desidera tagliare, controllare dietro il pannello che si sta tagliando per ostacoli dietro e utilizzare un pennarello non permanente per fare il contorno.
2. Praticare un foro pilota in uno degli angoli di larghezza sufficiente per inserire il seghetto po '- osserva la sicurezza strumento come occhiali protettivi e guanti.
3. Lentamente e con attenzione tagliare la linea fino a quando l'apertura è presente la stessa dimensione del pezzo guarnizione, sabbia, spigoli vivi e pulire la superficie intorno al foro in modo che sia libero da polvere / sporcizia.
4. Attenzione sganciare il rivestimento esterno del coperchio, inserire il corpo di copertura iniziale nel foro per controllare montaggio e segnare i quattro fori per le viti.
5. Praticare un foro pilota per ciascuna delle quattro viti, posizionare la guarnizione sul retro del coperchio (avendo cura di togliere la plastica adesiva posteriore), fissare il coperchio nel foro con viti idonee per il materiale che hai tagliato.
6. Rimontare il rivestimento esterno. Premendo in posizione saldamente tutto il giro. Ora siete pronti per soddisfare le vostre unità principale.